


HOW TO UPGRADE TO THE NEW BOOTLOADER

The bootloader is the part of the firmware which takes care of upgrading the main firmware. Nome II came with a brand new bootloader, much smarter and much faster, and your Midronome (Nome I) needs to upgrade its bootloader for any future firmware updates.

STEP 1

- Start the "Upgrade Midronome Bootloader Step 1" utility program
 - *note: this is the "Firmware Updater" tool you may have used before*
- Follow the steps and when asked, select the "upgrade-bootloader.midr" file

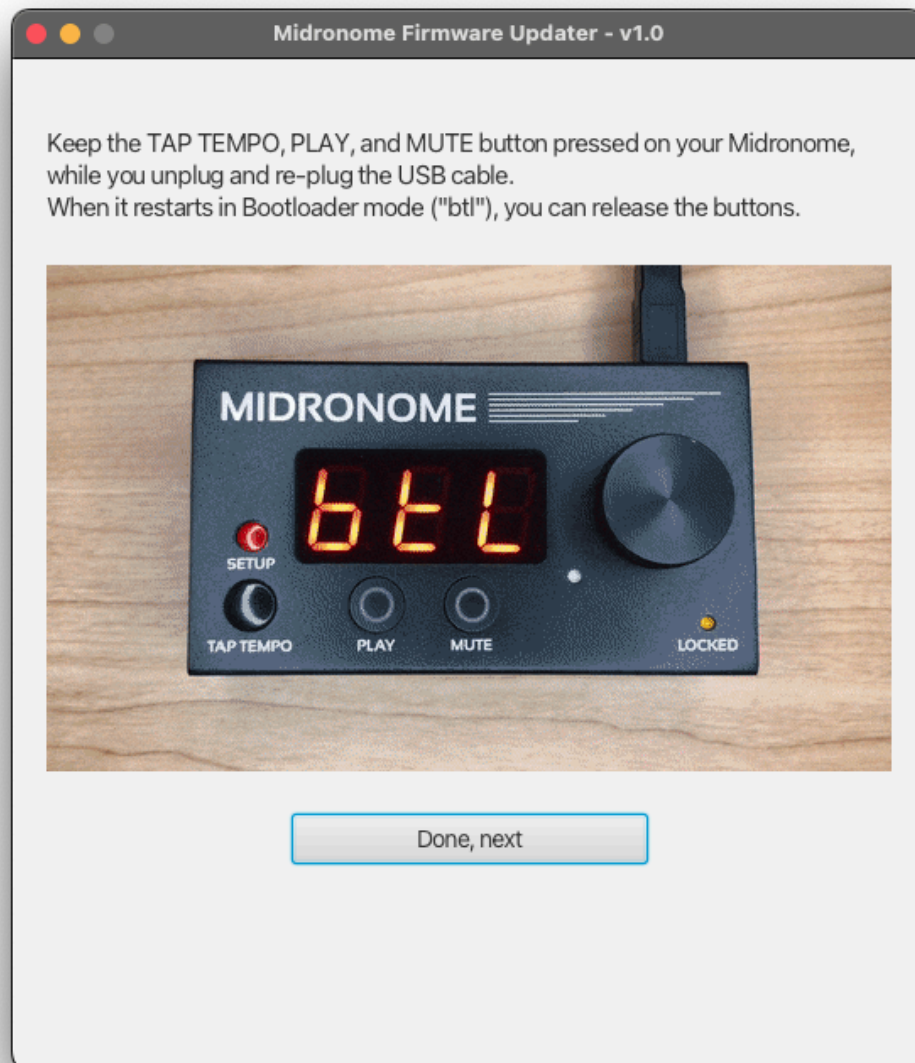

STEP 2

When step 1 is finished, the bootloader will be upgraded but the Midronome firmware will be erased. The device will start the new bootloader, it will show "UPG" and a **green light**.



(the new bootloader - the light will be yellow if it cannot connect to the computer over USB)

Use the second program, “[Upgrade Midronome Bootloader Step 2](#)”, to reload the firmware. Then you may delete all of these programs.

Notes for Mac Users:

- It seems the old bootloader does not work with macOS 15.0 (*Sequoia*)
- If you are on macOS 15 already, we suggest you find either a mac with an older macOS or a Windows machine to perform step 1
- Step 2 will work on any macOS or Windows, including Sequoia

If you have any questions or issues, please reach out on:

- [The Sim'n Tonic Forums](#)
- [The Sim'n Tonic Facebook Group](#)
- Or [contact Support](#) via email